

List of TSX50 System Function Codes

Abbreviated dialling	Entry programming	65
	Entry viewing	60
Access trunk by equipment number		19
Alarm	Read warnings	31*
	Read & clear warnings	31#
	Clear warnings	32
	Print level 1 alarms & warnings	901
	Print level 1 alarms & warnings	90#
	Suspend printing of level 1 alarms	900
Background music	On	17
	Off	18
Barring – extension to extension	On	23
	Off	24
Busy-out	Dial tone detector	44
	MF4 generator & MF4 module	42
	MF4 receiver	43
	Trunk	41
Clear all messages waiting		29
Data	Print	96
	Dump	97
	Load	98
Display	Wake-up operator controlled	72
	Extension meter	22
Extension meter audit		73
Night service destination programming		21
Printer	Purge	750
	Resume	75#
	Suspend	75*
Set	12-hour clock	14
	24-hour clock	15
	Wake-up	71
	Date	80
Switch to	Day service	12
	Night service	11
Unbusy	Dial tone generator	54
	MF4 generator & MF4 module	52
	MF4 receiver	53
	Trunk	51
VHOC	Enable digit verification mode	811
	Disable digit verification mode	810

List of TSX50 Maintenance Function Codes

Print all alarms	37#
Print individual alarms (enable)	371
Print individual alarms (disable)	370
Read level 1 alarms	33*
Read & clear level 1 alarms	33#
Read level 2 alarms	35*
Read & clear level 1 alarms	35#
Clear all level 1 alarms (also clears busy-outs)	34
Clear all level 2 alarms (also clears level 1 & busy-outs)	36
Run directed diagnostics	39
Show status of digital network card	85
Data print	96
Data dump	97
Data load (clear optional features data)	98#
Data load (retain optional features data)	98*