

1571 Voice mail indication

If you have subscribed to BT's BT Answer 1571 or Call Minder, your Decor 1571 will indicate when you have received a voice message by the message waiting indicator light flashing.

BT Answer 1571 and Call Minder are invisible answer machines located at your local exchange which will take messages when you are out, engaged on another call or on the Internet.

Your Decor 1571 also has a quick access facility to BT's 1571 Service and dedicated buttons (M1, M2, M3) which allow you to play, delete and save your messages.

To enable your Decor 1571 to let you know you have messages you must first subscribe to a BT messaging service.

BT Answer 1571 is a basic answering service and is completely free of charge. To activate the service, dial **Freefone 0800 003 800**.

For information on Call Minder, call BT on **Freefone 0800 800 150**. This is a chargeable Service.

To access your voice mail

Lift the handset and wait for the dial tone.

Press *and hold* the 1571 button for 3 seconds. You will hear the telephone dialling out and after a few seconds you will be connected automatically to your voice mail service.

To listen to your voice messages

When in 1571 mode, you are able to play, save and delete your messages using the dedicated One-Touch buttons on your Decor 1571. These are labelled Play, Save and Delete.

Press the **M1** button to PLAY your messages.

Press the **M2** button to SAVE your messages.

Press the **M3** button to DELETE your messages.

IMPORTANT

If you dial 1571 manually using the keypad (and not entered via the 1571 button) the One-Touch buttons will not dial the correct code to play, save or delete your message. Therefore, if you have stored numbers in these memories they will be dialled out as well.

If you do dial 1571 manually follow the announcements to play, save and delete your messages using the keypad.

Note

The message indicator light will remain on until you have listened to all of your voice messages.

IMPORTANT


After an incoming call, or after lifting the handset, your Decor 1571 will check the line for any messages. You will experience at least a 2 minute delay before the message waiting indicator light flashes if messages have been left.

Note

The message waiting indicator is activated by a stuttered dial tone which you can hear when you pick up your phone. BT Select Services, such as Call Diversion and Call Barring use a stuttered dial tone so therefore will cause the message waiting indicator to flash even if no messages have been left.

Wall mounting


1. Revolve the handset catch to keep the handset in place when wall mounted.
2. Locate lugs and mount the plinth provided into the holes under the base unit as shown.
3. Swing the plinth down to clip into the top hole.

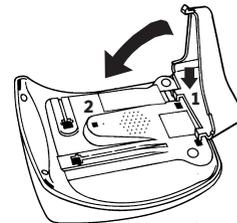

4. Drill 2 holes, 25mm deep using a 3mm drill, for the screws provided, using the template. Ensure that you do not drill into any hidden wiring or pipes. Insert the wall plugs provided and then insert a screw into each hole. Leave 2-3mm between the head of the screw and the wall.

5. Position the product onto the screws.

6. Drop down to secure.

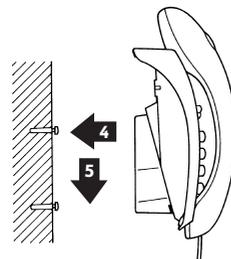

R&TTE Directive

Hereby, Suncorp Technologies Ltd, declares that this Decor 1571 is in compliance with the essential requirements and other relevant provisions of Directive 1999/5/EC.

The Declaration of Conformance for the Decor 1571 is published on the website
<http://www.suncorptech.com/bt>

General information

Guarantee

Your Decor 1571 is guaranteed for a period of 12 months from the date of purchase.

Subject to the terms listed below the guarantee will provide for the repair of, or at BT's or its agent's discretion the option to replace the Decor 1571, or any component thereof, which is identified as faulty or below standard, or fails as a result of inferior workmanship or materials. Products over 28 days old from the date of purchase may be replaced with a refurbished product.

The conditions of this guarantee are:

- The guarantee shall only apply to defects that occur within the 12 month guarantee period.
- Proof of purchase is provided.
- The equipment is returned to the point of purchase.
- This guarantee does not cover any faults or defects caused by accidents, misuse, fair wear and tear, neglect, tampering with the equipment, or any attempt at adjustment or repair other than by approved agents.
- This guarantee does not affect your statutory rights.

Within the 12 month guarantee period:

In the unlikely event of a defect occurring, please return the product, with the receipt, to the place of purchase.

Outside of the 12 month guarantee period:

If your product needs repair after the guarantee period has ended, the repair must meet the approval requirements for connection to the telephone network. We recommend that you contact BT's approved repair agent, TecLogic on 01672 564444 or a local qualified repairer.

If you have to return your Decor 1571

Pack the unit securely, preferably in the original packaging. All parts must be returned. We cannot take responsibility for goods damaged in transit.

Technical information

How many telephones can you have?

All items of telephone equipment have a Ringer Equivalence Number (REN), which is used to calculate the number of items which may be connected to any one telephone line. Your Decor 1571 has a REN of 1. A total REN of 4 is allowed, if the total REN of 4 is exceeded, the telephones may not ring. With different telephone types there is no guarantee of ringing, even when the REN is less than 4.

Switchboard compatibility

This product is intended for use within the UK for connection to the public telephone network and compatible switchboards, which support tone dialling and time break recall. If in doubt please consult your Service Provider.

YOU MUST
SUBSCRIBE TO
BT ANSWER 1571 OR
CALL MINDER BEFORE THIS
FEATURE WILL WORK.
A QUARTERLY FEE IS PAYABLE FOR
CALL MINDER.



Please note that battery is not included. You will need 1 x PP3 9 Volt battery

Decor 1571

Corded Telephone with Message Waiting Indicator

User Guide

This product is intended for connection to analogue public switched telephone networks and private switchboards in the United Kingdom.



Offices worldwide

The telecommunications services described in this publication are subject to availability and may be modified from time to time. Services and equipment are provided subject to British Telecommunications plc's respective standard conditions of contract. Nothing in this publication forms any part of any contract.

© British Telecommunications plc 2002.
Registered Office: 81 Newgate Street, London EC1A 7AJ.
Registered in England No. 1800000.
Decor 1571 Issue 3 (3/02) 1
Designed by the Art & Design Partnership Limited.
Printed in China by Suncorp Technologies.




At a glance

One-Touch buttons

When in 1571 mode, press to play, save and delete your voicemail messages.

Also used to store and automatically dial up to three numbers at the touch of one button.

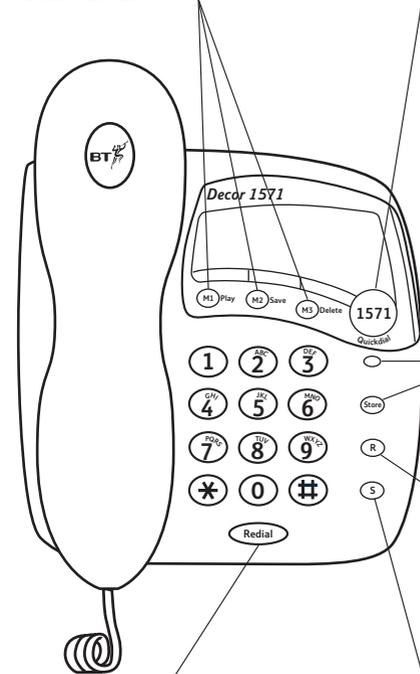

1571/Quickdial button

Press and hold to automatically dial 1571 to easily access BT Answer 1571 or Call Minder.

Also allows you to dial up to ten numbers stored in the Quickdial memory at the touch of two buttons.

Call/Message Waiting indicator light

Flashes to indicate you have new voice messages waiting to be played.

Also flashes to indicate an incoming call, or when you are storing numbers, using secrecy or setting the ringer.

Store button

Use to store numbers in the memory and to change the ringer and pitch volume.

Recall button

For use with a switchboard/PBX and BT Select Services. Please contact your switchboard supplier for more information. For more information on BT's Select Services please call **Freefone 0800 800152**

Secrecy button

Lets you talk to someone in the same room without the person you are calling hearing you.


Redial/Pause button

Redials the last number called. Also, press to enter a pause when storing a number in the memory.

Handset hook

Keeps the handset in place when the Decor 1571 is wall mounted. See back page for more information.

Revolve the handset catch on the base unit. The handset will now be able to rest on the hook when wall-mounted.

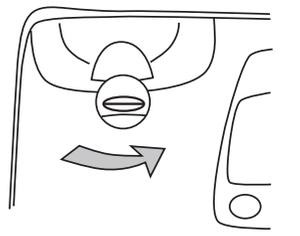

Safety information

General

Simply clean your Decor 1571 with a damp (not wet) cloth, or an anti-static wipe. Never use household polish as this may damage the product. Never use a dry cloth as this may cause static shock.

Do not open the Decor 1571. This could expose you to high voltages or other risks.

Never dispose of batteries in a fire. There is a serious risk of explosion and/or the release of highly toxic chemicals.

Environmental


Do not expose to direct sunlight.

We recommend that you do not place the product on antique/veneered wood to avoid damage.

Do not stand your product on carpets or other surfaces which generate fibres, or place it in locations preventing free flow of air over its surfaces.

Do not submerge any part of your product in water and do not use it in damp or humid conditions, such as in bathrooms.

Do not expose your product to fire, explosive or other hazardous conditions.

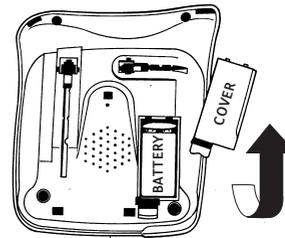

Note

You will still be able to make and receive calls via the handset without a battery fitted. However, the message waiting indicator will not function.

Battery low indicator

If the battery is nearing the end of its useful life, a single beep will be heard every 10 seconds to indicate that you need to change the battery.

2. Plug your Decor 1571 into the telephone socket.



Your Decor 1571 is now ready for use.

Setting up

Plan the location of your Decor 1571.

Situate your Decor 1571 close enough to a phone socket so that the line cord will reach.

You can wall-mount your product, see back page.

1. Insert the battery

Please note you will require 1 x PP3 9 Volt battery. This is not included.

Lift the battery cover and insert the battery as shown opposite.

Using the telephone

Making and ending calls

To make a call

Lift the handset and wait for the dial tone.

Dial the telephone number.

To end a call

Replace the handset.

To receive a call

When the telephone rings the call indicator light will also flash to indicate that there is an incoming call. Simply pick up the handset.

To redial the last number called

Lift the handset.

Press the **REDIAL** button.

The last number called is dialled.

A redial number can be no longer than 32 digits.

Secrecy

When on a call you can talk to someone in the same room, without your caller hearing.

To switch secrecy on and off

During a call press *and release* the **SECURITY** button.

The call indicator light will flash to show that secrecy is on.

Your caller will be put on hold. You can now talk to someone in the room without your caller hearing you.

Press *and release* the **SECURITY** button again to return to your caller.

Note

During all storing operations the call indicator light will flash.

To adjust the ringer volume

There are 3 volume settings to choose from: HIGH, LOW or OFF. The default setting is HIGH.

Lift the handset and press the **STORE** button. The call indicator light will flash.

Press the ***** button.

Press either, **1** for HIGH, **2** for LOW or **3** for OFF.

Press the **STORE** button.

You will hear a confirmation tone.

Replace the handset.

Note

If the ringer is set to OFF, the call indicator light will still flash to indicate someone is calling you.

To set the ringer pitch

The ringer pitch can be set to HIGH or LOW. The default setting is HIGH.

Lift the handset and press the **STORE** button. The call indicator light will flash.

Press the **#** button.

Press either, **1** for HIGH or **2** for LOW.

Press the **STORE** button.

You will hear a confirmation tone.

Replace the handset.

One-Touch memories

You can store your three most frequently used telephone numbers in the One-Touch memories (**M1, M2** or **M3**). Please note that the number can be no longer than 18 digits.

To store a One-Touch number

Lift the handset.

Press the **STORE** button. The call indicator light will flash.

Press the memory location number, (**M1, M2, M3**), under which you want to store the number.

Enter the telephone number you want to store including the area code if applicable.

Press the **STORE** button.

You will hear a confirmation tone. Replace the handset.

Note

Whilst storing a number in the memory you can cancel the operation by replacing the handset on the cradle.

To dial a One-Touch number

Lift the handset and wait for the dial tone.

Press the memory location number, (**M1, M2, M3**), under which the number is stored.

The number is dialled automatically.

To insert a pause in a memory number

Sometimes you may need to enter a pause when storing a number, e.g. with an overseas number you may need to enter a pause after storing the international code.

Press the **REDIAL** button in the place where you want to enter a pause.

When you dial the number your Decor 1571 will automatically insert the pause where you stored it.

Quickdial memories

You can store a further 10 telephone numbers in the Quickdial memories. Please note that the numbers can be no longer than 18 digits long.

To store a number in the Quickdial memory

Lift the handset.

Press the **STORE** button. The call indicator light will flash.

Press the memory location number between **0** and **9** under which you want to store the number.

Enter the telephone number you want to store including the area code if applicable.

Press the **STORE** button.

You will hear a confirmation tone. Replace the handset.

Note

There is a quickdial memory label on your telephone. Lift the plastic plate up and you can write on the label to keep a record of which memory location number you have used for each telephone number.

To dial a number in the Quickdial memory

Lift the handset and wait for the dial tone.

Press the **1571/QUICKDIAL** button.

Press the memory location number between **0** and **9**, under which the number is stored.

The number is dialled automatically.

Note

You can mix manual and memory dialling as required, for example, you can dial the area code 020 8304 from the memory and then complete the number manually.

To delete stored numbers

Lift the handset.

Press the **STORE** button. The call indicator light will flash.

Press the memory location number (**0-9**) or (**M1, M2, M3**) under which you have stored the number you wish to delete.

Press the **STORE** button. You will hear a confirmation tone. Replace the handset.

Alternatively, any existing number stored in the Quickdial or One-Touch memories can be overwritten by entering a new number under the same memory location. Simply follow the instructions under the storing numbers sections previously shown.

Note

If any error occurs in the storing mode you will hear three short beeps, then the product will return to talk mode.

If you unplug your Decor 1571 the numbers stored in the memory will be saved. However, the last number redial memory will be lost.