


## At a glance

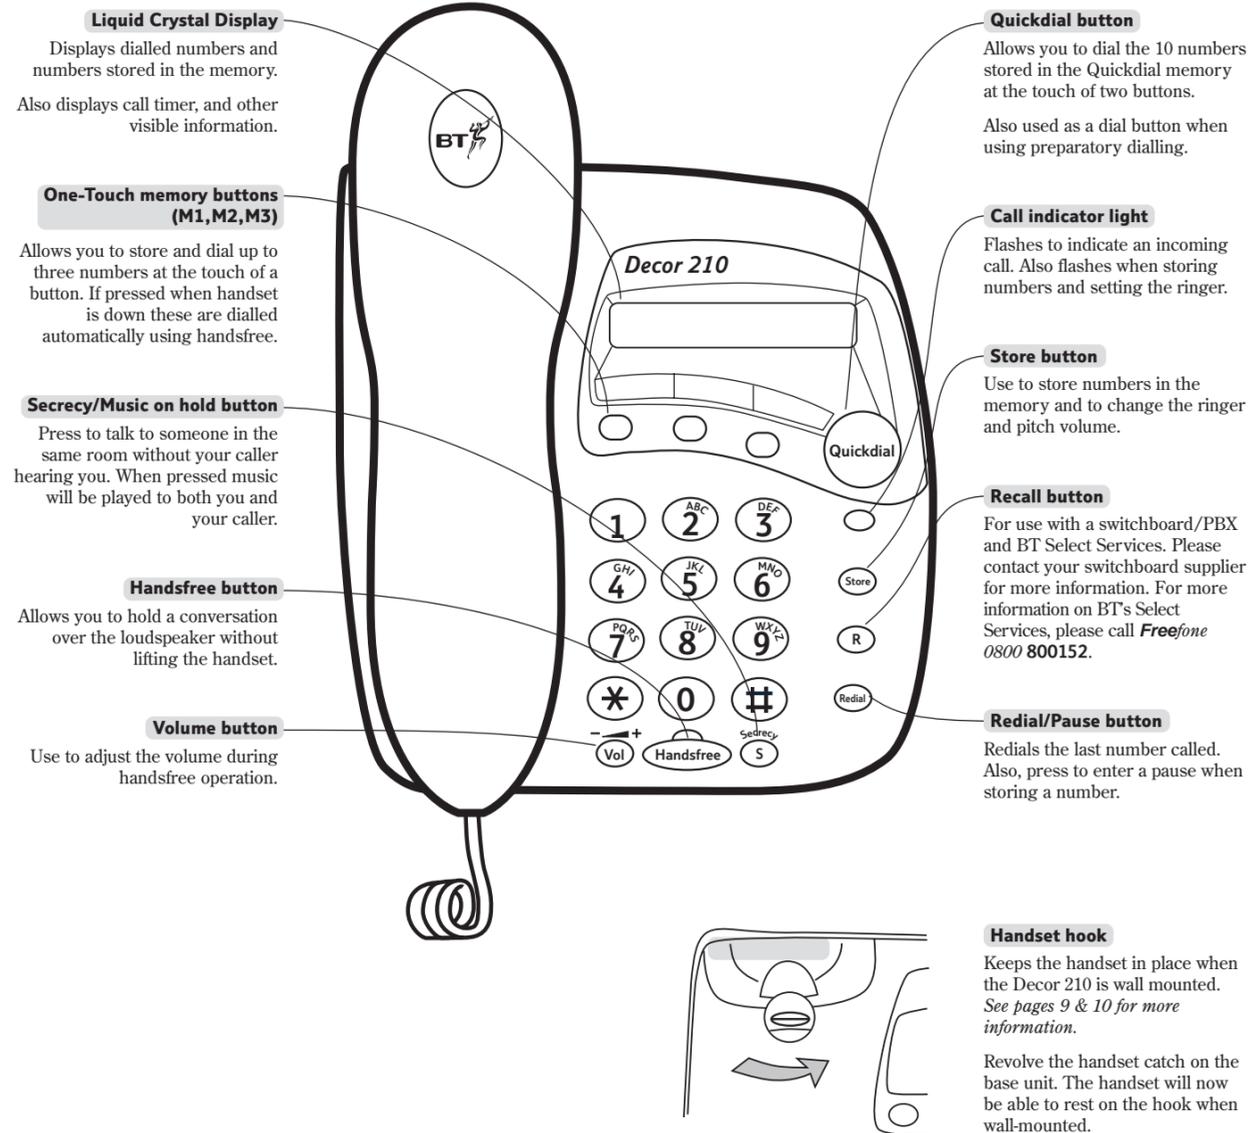

### Liquid Crystal Display

Displays dialled numbers and numbers stored in the memory. Also displays call timer, and other visible information.

### One-Touch memory buttons (M1, M2, M3)

Allows you to store and dial up to three numbers at the touch of a button. If pressed when handset is down these are dialled automatically using handsfree.

### Secrecy/Music on hold button

Press to talk to someone in the same room without your caller hearing you. When pressed music will be played to both you and your caller.

### Handsfree button

Allows you to hold a conversation over the loudspeaker without lifting the handset.

### Volume button

Use to adjust the volume during handsfree operation.

### Quickdial button

Allows you to dial the 10 numbers stored in the Quickdial memory at the touch of two buttons.

Also used as a dial button when using preparatory dialling.

### Call indicator light

Flashes to indicate an incoming call. Also flashes when storing numbers and setting the ringer.

### Store button

Use to store numbers in the memory and to change the ringer and pitch volume.

### Recall button

For use with a switchboard/PBX and BT Select Services. Please contact your switchboard supplier for more information. For more information on BT's Select Services, please call **Freefone 0800 800152**.

### Redial/Pause button

Redials the last number called. Also, press to enter a pause when storing a number.

### Handset hook

Keeps the handset in place when the Decor 210 is wall mounted. See pages 9 & 10 for more information.

Revolve the handset catch on the base unit. The handset will now be able to rest on the hook when wall-mounted.

## Safety information

### General

Simply clean your Decor 210 with a damp (not wet) cloth, or an antistatic wipe. Never use household polish as this may damage the product. Never use a dry cloth as this may cause static shock.

Do not open the Decor 210. This could expose you to high voltages or other risks.

### Environmental

Do not expose to direct sunlight. We recommend that you do not

place the product on antique/veneered wood to avoid damage. Do not stand your product on carpets or other surfaces which generate fibres, or place it in locations preventing free flow of air over its surfaces.

Do not submerge any part of your product in water and do not use it in damp or humid conditions, such as in bathrooms.

Do not expose your product to fire, explosive or other hazardous conditions.

## Setting up

### Plan the location of your Decor 210.

Situate your Decor 210 close enough to a phone socket so that the line cord will reach.

You can wall-mount your product, see back page.

### Plug your Decor 210 into the telephone socket.



Your Decor 210 is now ready for use.

## Using the telephone

### Making and ending calls

#### To make a call

Lift the handset and wait for the dial tone.

The  icon will be shown on the display to indicate that the phone is in use.

Dial the telephone number.

Or

#### Preparatory dialling

Dial the telephone number without lifting the handset.

It is shown on the display but will not be dialled. If you have entered the number incorrectly press the **HANDSFREE** button or lift the handset to clear the number.

If the number is correct, press the **QUICKDIAL** button. Your Decor 210 will automatically dial the number using handsfree. The call can now be taken using handsfree or you can use the handset.

#### To end a call

Replace the handset.

### Call timer

Your Decor 210 automatically times the duration of all outgoing external calls. The display will show 0-01 to indicate that call timer is on. The call duration will be shown both during the call and for a few seconds after it is completed.

### To receive a call

When the telephone rings the call indicator light will also flash to indicate that there is an incoming call. Simply pick up the handset.

### To redial the last number called

Lift the handset.

Press the **REDIAL** button.

The last number called is displayed and then dialled.

A redial number can be no longer than 32 digits.

You can also press the **REDIAL** button when the handset is down to check the number first.

If it is correct, press the **QUICKDIAL** button. The number will be dialled automatically using handsfree.

### Note

*If the telephone has been unplugged the last number dialled will not be saved.*

### Secrecy/Music on hold

When on a call you can talk to someone in the same room, without your caller hearing.

### To switch secrecy on and off

During a call press *and release* the **SECURITY** button.

Your caller will be put on hold and both you and the caller will hear music. You can now talk to someone in the room without your caller hearing you. The display will flash **SECURITY** to confirm secrecy is on.

Press *and release* the **SECURITY** button again to return to your caller.

### Note

*When secrecy is in use, and another telephone connected to the same line is picked up, secrecy is cancelled and the call will be transferred to that telephone.*

### Handsfree talking

The handsfree feature allows you to use the phone without picking up the handset, giving you more freedom when you are speaking on the phone. You can hear the caller's voice through the in-built speaker.

### Important

*Your Decor 210 is specially designed to operate without the need of a mains power supply. It is therefore necessary to make your first call via the handset. This call should last at least 1 minute. Subsequent calls can now be made using the handset or handsfree feature.*

### To make a handsfree call

Press the **HANDSFREE** button.

The handsfree light will come on and you will hear the dial tone. The display will also show the volume level.

Dial the telephone number.

You can now talk to your caller through the microphone, or pick up the handset to speak to your caller privately.

### To receive a call in handsfree mode

Press the **HANDSFREE** button when the phone rings.

### Note

*You can swap between using the handset and handsfree during a call.*

*If using the handset, press the **HANDSFREE** button and replace the handset.*

*If using handsfree, lift the handset to talk privately.*

### To change the volume on a handsfree call

You can adjust the speaker volume when you are on a handsfree call.

### Note

*You can only change the volume of a call when using handsfree.*

Press the **VOLUME** button. The volume level will be shown on the display .

There are 5 levels to choose from. It is pre-set to the mid-range level. Press the **VOLUME** button to move up and down each level.

### To adjust the ringer volume

There are 3 ringer volume settings to choose from: **HIGH**, **LOW** or **OFF**. The default setting is **HIGH**.

Lift the handset and press the **STORE** button.

Press the  button. The display will show: **BELL LEVEL HI**

Press either, **1** for **HIGH**, **2** for **LOW** or **3** for **OFF**.

Press the **STORE** button. Your selected setting will be displayed.

You will hear a confirmation tone and the display will show **SAVED**.

Replace the handset.

(If the ringer is set to **OFF**, the call indicator light will still flash to indicate someone is calling you. The display will show **RINGER OFF** when you lift the handset or use handsfree.)

### To set the ringer pitch

The ringer pitch can be set to **HIGH** or **LOW**. The default setting is **HIGH**.

Lift the handset and press the **STORE** button.

Press the **#** button. The display will show **BELL Pitch HI**.

Press either, **1** for **HIGH** or **2** for **LOW**.

Press the **STORE** button.

You will hear a confirmation tone and the display will show **SAVED**.

Replace the handset.

### One-Touch memories

You can store your three most frequently used telephone numbers in the One-Touch memories (**M1**, **M2** or **M3**). Please note that the number can be no longer than 18 digits.

### To store a one touch number

Lift the handset.

Press the **STORE** button. The display will show **Loc-**.

Press the memory location number, (**M1**, **M2**, **M3**), under which you want to store the number. The display will show, e.g. **Loc-d1** if you want to store in **M1** location.

Enter the telephone number you want to store, including the area code if applicable.

Press the **STORE** button.

You will hear a confirmation tone and the display will show **SAVED**. Replace the handset.

### Note

*Whilst storing a number in the memory you can cancel the operation by replacing the handset on the cradle.*

### To dial a One-Touch number

Lift the handset and wait for the dial tone.

Press the memory location number, (**M1**, **M2**, **M3**), under which the number is stored.

The number is displayed and dialled automatically.

You can also dial a One-Touch number when the handset is

down. Simply press the memory location number (**M1**, **M2**, **M3**). Your Decor 210 will automatically dial the number using handsfree.

### To insert a pause in a memory number

Sometimes you may need to enter a pause when storing a number, e.g. with an overseas number you may need to enter a pause after storing the international code.

Press the **REDIAL** button in the place where you want to enter a pause.

When you dial the number your Decor 210 will automatically insert the pause where you stored it.

### Quickdial memories

You can store a further 10 telephone numbers in the Quickdial memories. Please note that the numbers can be no longer than 18 digits long.

### To store a number in the Quickdial memory

Lift the handset.

Press the **STORE** button.

Enter the memory location number between **0** and **9**, under which you want to store the number. The display shows, e.g. **Loc-8** if you want to store in location **8**.

Enter the telephone number you want to store, including the area code if applicable.

Press the **STORE** button. You will hear a confirmation tone and the display will show **SAVED**. Replace the handset.

**Note**

There is a Quickdial memory label included on the reverse side of your handset and a One-Touch memory label on the base unit. You can use these labels to keep a record of which memory location number you have used for each telephone number.

**To dial a number in the Quickdial memory**

Lift the handset and wait for the dial tone.

Press the **QUICKDIAL** button.

Enter the memory location number between **0** and **9**, under which the number is stored. The number is displayed and dialled automatically.

**Note**

You can mix manual and memory dialling as required, for example, you can dial the area code **020 8304** from the memory and then complete the number manually.

**To delete stored numbers**

Lift the handset.

Press the **STORE** button.

Enter the memory location number (**0-9**) or (**M1,M2,M3**) under which you have stored the number you wish to delete.

Press the **STORE** button. You will hear a confirmation tone.

Replace the handset.

Alternatively, any existing number stored in the One-Touch or Quickdial memories can be overwritten by entering a new number under the same memory location. Simply follow the instructions under the storing numbers sections previously shown.

**Note**

If any error occurs in the storing mode you will hear three short beeps, then the product will return to talk mode.

If you unplug your Decor 210 the numbers stored in the memory will be saved. However, the last number redial memory will be lost.

## General information

**Guarantee**

Your Decor 210 is guaranteed for a period of 12 months from the date of purchase.

Subject to the terms listed below the guarantee will provide for the repair of, or at BT's or its agent's discretion the option to replace the Decor 210, or any component thereof, which is identified as faulty or below standard, or fails as a result of inferior workmanship or materials. Products over 28 days old from the date of purchase may be replaced with a refurbished product.

**The conditions of this guarantee are:**

- The guarantee shall only apply to defects that occur within the 12 month guarantee period.
- Proof of purchase is provided.
- The equipment is returned to the point of purchase.
- This guarantee does not cover any faults or defects caused by accidents, misuse, fair wear and tear, neglect, tampering with the equipment, or any attempt at adjustment or repair other than by approved agents.
- This guarantee does not affect your statutory rights.

**Within the 12 month guarantee period:**

In the unlikely event of a defect occurring, please return the product, with the receipt, to the place of purchase.

**Outside of the 12 month guarantee period:**

If your product needs repair after the guarantee period has ended, the repair must meet the approval requirements for connection to the telephone network. We recommend that you contact BT's approved repair agent, TecLogic on **01672 564444** or a local qualified repairer.

**If you have to return your Decor 210**

Pack the unit securely, preferably in the original packaging. All parts must be returned. We cannot take responsibility for goods damaged in transit.

**Technical information****How many telephones can you have?**

All items of telephone equipment have a Ringer Equivalence Number (REN), which is used to calculate the number of items which may be connected to any one telephone line. Your Decor 210 has a REN of 1.

A total REN of 4 is allowed, if the total REN of 4 is exceeded, the telephones may not ring. With different telephone types there is no guarantee of ringing, even when the REN is less than 4.

**R&TTE Directive**

Hereby, Suncorp Technologies Ltd, declares that this Decor 210 is in compliance with the essential requirements and other relevant provisions of Directive 1999/5/EC.


The Declaration of Conformance for the Decor 210 is published on the website <http://www.suncorptech.com/bt>

**Switchboard compatibility**


This product is intended for use within the UK for connection to the public telephone network and compatible switchboards, which support tone dialling and time break recall. If in doubt please consult your service provider.

## Wall mounting

1. Locate lugs and mount into holes under base unit as shown.
2. Swing mount down to clip into top hole.

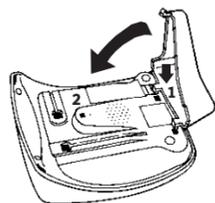

3. Drill 2 holes, 25mm deep using a 3mm drill, for the screws using the template. Ensure that you do not drill into any hidden wiring or pipes. Insert the wall plugs provided and then insert a screw into each hole. Leave 2-3mm between the head of the screw and the wall.
4. Position the product onto the screws.
5. Drop down to secure.

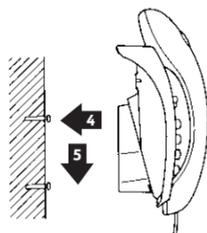

69mm

**Offices worldwide**

The telecommunications services described in this publication are subject to availability and may be modified from time to time. Services and equipment are provided subject to British Telecommunications plc's respective standard conditions of contract. Nothing in this publication forms any part of any contract.

© British Telecommunications plc 2001.  
Registered Office: 81 Newgate Street, London EC1A 7AJ.  
Registered in England No. 1800000.  
Decor 210 (5/01) 6.1  
Designed by the Art & Design Partnership Limited.  
Printed in China by Suncorp Technologies.



# Decor 210

**Corded Telephone**

# User Guide

This product is intended for connection to analogue public switched telephone networks and private switchboards in the United Kingdom.